 
 

 
 
Torque Wrench Adapter Formulas

 


 


 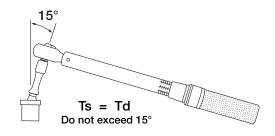












TORQUE FORMULA LEGEND

Ts = Torque wrench setting Td = Fastener torque desired A = Torque wrench length

B = Torque adapter length